



Maine's Tent & Party Specialists

Gas Grills

Safety information

- This grill is for outdoor use only
- Unit must be at least 24" from any combustible materials
- Never locate this grill under overhead structures
- Do not leave unit unattended while operating

Check periodically to see that all burners are lit. If a burner goes out, shut off gas immediately and wait 5 minutes before relighting.

Grill is equipped with POL (with left handed threads) tank fitting. Do not use adapters to connect to a larger cylinder.

Propane cylinders must be transported in a secured, upright position with a safety cap installed on service valve.

Propane cylinders must never be stored in buildings, garages or other enclosed areas.

Never leave propane cylinders in vehicles which may heat up. Excessive heat may result in the discharge of the propane vapor through the cylinder relief valves.

Connection:

Connect regulator to propane cylinder by inserting brass nipple into service valve and tightening coupling nut by turning counter-clock wise until full stop. Use wrench to tighten.

Slowly open cylinder service valve by turning hand wheel counterclockwise

Lighting:

CAUTION- Do not stand with head or arms directly over burner while lighting.

Each section of the grill has 2 burners. Locate burner and control valve for first burner in first section. While holding a lit fireplace match or butane lighter next to burner, open control valve by turning handle outward 90 degrees. Burner should light immediately. After first burner is lit, second burner in same section may be lit by simply opening control valve. Repeat this procedure for each grill section.

Shutting Down:

Turn all burner control handles toward the left to closed position. Close propane cylinder valve by turning hand wheel clockwise to a full stop. Disconnect regulator from service valve by turning coupling nut clockwise. To avoid extra charges, be sure grill is returned clean. Never pour water on grill or leave exposed to rain.