



Maine's Tent & Party Specialists

Steam Table

(2) 8 Quart Stainless Steel Food Containers

IMPORTANT-
DO NOT OPERATE WHEN WARMER OR FOOD CONTAINERS ARE EMPTY.

Operating Instructions

- Place the steam table on a level horizontal table. Plug into a standard outlet.
- Add about 64 oz. of water into the base, not the food containers
- Never overfill with water or let container float up. Remove excess water if so.
- Turn the temp control knob clockwise to desired warmth. The light turns on when the unit is on and off when turned off.
- Never move or carry the unit when it's on or contains hot food. You may get burned if trying to do so.
- If operating for an extended period of time more water may need to be added.
- When finished using turn the control knob counterclockwise to the off position and unplug the unit.
- Allow the unit to cool before moving, cleaning or emptying the remaining water.

Maintenance

NEVER IMMERSE BASE WARMER IN WATER. DAMAGE TO IT COULD OCCUR.

The food containers and ladle are machine washable or can be cleaned by hand in warm soapy water. The top collar should be wiped over with a damp soapy cloth

Always return clean to avoid additional charges.